

www.calling-tech.com



CT-R310

User Manual for 3-digit Wireless receiver

1.Feature:

- *Easy installation & operation,smart appearance
- *3 digits can be named from “000-999”,and the first digit can be “A,b,C,d,H,L,P,U” 8 letters
- *Adopt SCM digit coding technology and the capacity is steady
- *Can work with 200pcs call buttons in max,indicating different service type
- *Can rolling display last 10 calling information with ring tone.
- *The call can be canceled via the "cancel" key on 3-key call button (for example,CT-T301) or "ENT"key on itself or automatically canceled via setting in F06.
- * Installation: wall-mounted or desk-top

2.Function instruction:

(1) Function key:

FUN: Function setting key --- enter or exit function setting

SEL: Select digit ---- under Function setting status: to select digit

-----under working status: to trace up the calling information

NEXT: Adjust digit ---- under Function setting status: to adjust digit

-----under working status: to trace down the calling information

ENT: Confirm -----under Function setting status: to save the setting

-----under working status: to cancel the calling information

(2) Function list:

F01 Save call buttons	F02 Delete call buttons
F03 None	F04 None
F05 Display mode (set rolling display)	F06 Display time (00-199s)
F07 None	F08 None
F09 Restore factory setting	

3.System setting

F1 Save call buttons

1. Press "FUN" key into function setting status,showing "F01"
- 2.Press "ENT" key and it displays "001".
- 3.Press "SEL"and"NEXT" to choose the call button number,then “ENT”,showing “_ _ _”
- 4.Press “call”key on call button for 2s till the number goes to the next one with “Di” sound.

For example, choose "001",when the setting is successful ,the receiver will show "002" automatically.

Note:

- a.When the receiver displays "E3", it means the receiver is no space to save any more transmitters.
 - b.When the receiver displays "E2",it means the number has been used.
 - c.When the receiver display "E1",it means this number has been saved into this receiver.
5. Press "FUN" key to exit the function setting.

F2 Delete call buttons

- 1.Press "FUN" key and "NEXT" key to "F02" function.
- 2.Press "ENT" key,the receiver will show "001".
- 3.Press "SEL" and "NEXT" to choose the call button number to delete.
- 4.Press "ENT" and the receiver will sound "DI" to indicate the number has been deleted,and the system will show next number automatically into deleting state.

Note:

Choose transmitter number "00" to delete all the saved numbers.

5. Press "FUN" key to exit the function setting.

F3 None

F4 None

F5 Display mode (set rolling display)

- 1.Press "FUN" key and "NEXT" key to "F05" function.
- 2.Press "ENT" key,the receiver will show the current setting (“1” means no rolling display, “2” means rolling display)
- 3.Press "NEXT" to choose the suitable model from “1 & 2 ”,then “ENT”.
- 4.Press "FUN" key to exit the function setting.

F06 Display time (00-99s)

- 1.Press "FUN" key and "NEXT" key to "F06" function.
- 2.Press "ENT" key,the receiver will show “10” (Default volume level)
- 3.Press "SEL" and "NEXT" to choose the suitable display time from “00-99”s,then “ENT”.
- 4.Press "FUN" key to exit the function setting.

F07 None

F08 None

F9 Restore factory defaults

- 1.Press "FUN" key and "NEXT" key to "F9" function.
- 2.Press "ENT", it will show "001".
- 3.Press "NEXT" to choose "000".
- 4.Press "ENT",it will display "000"-"999" and sound "DI",which means the setting is done.
5. Press "FUN" key to exit the function setting.

4.Technical Parameters:

Model number: CT-R310	Frequency:433MHZ
Working Voltage: DC 5V	Audio Output Power: 0.5W
Working Currency: 80mA	Receiver Sensitivity: 106dB
Size: 218*165*30mm	